THE JUNIPER LEAP LONG ENGINE WASH PROBES JMP/LEAP/D/7185/B

(Supplied as set of two)


Fitment Guide



AIRCRAFT SERVICE EQUIPMENT



The LEAP long engine wash probes JMP/LEAP/D/7185/B

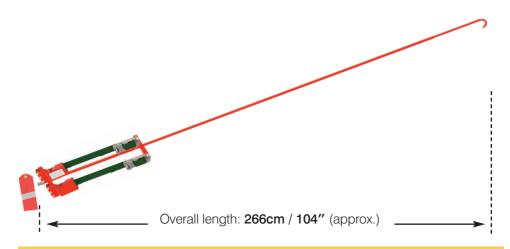

1B Engine wash probe clamps

The LEAP long engine wash probes are supplied with a choice of two fixing clamps depending on which engine they are intended to wash. The 1B engine clamps have a curved contact area to provide a secure contact when locating on the chevron edged nacelle on the LEAP 1B.

Curved wash probe clamp profile for use with the 1B engine



Delivery hose selection







When using LEAP engine wash probes, turn the three way selector to position 'B' this ensures selection of the ½" bore delivery hose.

Please refer to the relevant AMM for correct flow rate information.

STEP 1: Fitment to engine



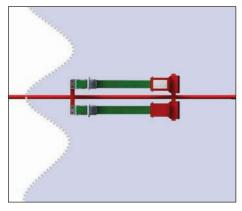


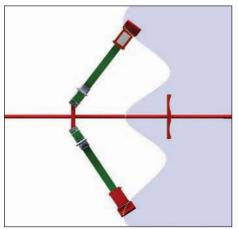

Position the probe clamps on the chevrons as shown above

Each probe to be inserted and fitted on the engine at approximately the **3.00 & 9.00 o'clock** positions so that the probe 'j' hook fits over the booster/fan splitter.

Note: Ensure the engine fan is held securely during fitting of the engine 'J' hook probes.

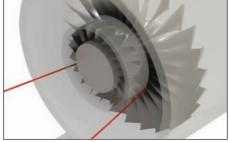

Guide the probes through the fan outlet guide vanes (ogv's) from the aft end, at approximately the **3.00 & 9.00 o'clock** positions, aft looking forward.

Put probes over the booster/fan splitter so that the tips point between the booster inlet guide vanes into the booster and attach clamps. (See STEP 2 for clamping instructions).


Connect the twin hose assembly (provided with all compressor wash rigs) to both of the engine probes, making sure that the probes are attached securely to the engine with the hoses attached.

Connect delivery hose from the wash rig to the twin hose assembly.

Probe installation is now complete.

Please refer to the relevant AMM for flow rate information

STEP 2: Securing the spring clamps

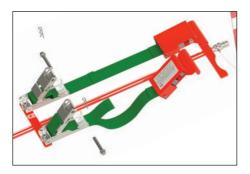


Each probe has two spring loaded clamps which are tensioned by over centre buckle clamping devices.

To release each clamp, remove the safety clip and pin and open each clamp by pushing forward on the releasing mechanism.

This will allow the spring loaded clamp to be removed for relocation on the engine. Once relocated, pull gently on the strap and re-apply over the centre buckle.

 Re-fit safety pin and clip - once the probe is inserted and located in the engine.



Spring clamps prevent overtightening when fitting each probe.

Connection to rig*



*Shown here are the CF6-80C2 long probes for illustrative purposes only.

Contact details





A.T.Juniper (Liverpool) Limited

Aircraft Service Equipment

Marshall Works

11A Prenton Way, North Cheshire Trading Estate, Prenton, Wirral CH43 3DU England.

Tel: +44 (0)151 733 1553

Email: gse@juniper-liverpool.com Web: www.juniper-liverpool.com